



BIG TOYS FOR BIG BOYS



17 Commerce Court  
Noosaville 4566  
Phone: 07 5442 4399  
www.rhynooffroad.com.au  
rhyno@rhynooffroad.com.au

**GET IT UP WITH RHYNO**  
**Rhyno Off Road Manufacturing.**

## RHYNO BODY MOUNT KIT 1, 2 and 3 inch LIFT

To Suite:

Toyota Landcruiser - Models FJ, HJ & BJ - 40, 45, 47 & 55 series, 1960 – 1985

### **FITTING INSTRUCTIONS**



1. Remember Safety First. Make sure the vehicle is secure.
2. Remove the nut from the existing cab mount and any others close enough to affect the lifting of the cab.
3. Take the weight of the cab at the first cab mount location and remove the retaining bolt and old cab mount.
4. Make sure there is enough clearance and fit the new cab mount, minus the poly washer, into place with the locating lug pointing down and locating into the chassis bracket.

5. Fit the retaining bolt provided down from the top, through the cab and cab mount and locate the cab mount centrally.
6. Lower the cab back down onto the cab mount.






BIG TOYS FOR BIG BOYS



17 Commerce Court,  
Noosaville 4566  
Phone: 07 5442 4399  
www.rhynnooffroad.com.au  
rhyno@rhynnooffroad.com.au

# GET IT UP WITH RHYNNO

**Rhyno Off Road Manufacturing.**

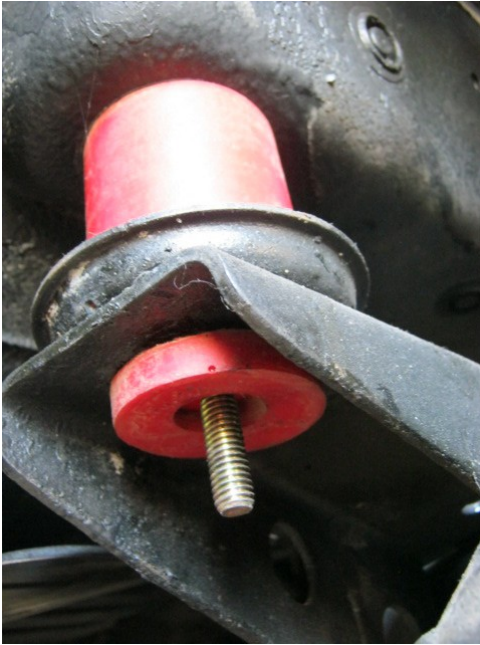

7. Place the poly washer over the protruding portion of the cab mount locator.



8. Place the metal washer over the bolt and fit the Nylock nut provided.



9. Tighten the Nylock nut until it is firm.

10. Caution: Do Not Overtighten.

11. Use a piece of square tube or similar for the front mount.

